


Installation instructions

Air/ Vacuum Valve model DAV-M-x-K [A] [SA]

(x= valve size in inches)

- The valve should be installed in vertical position only
- The outlet from the main pipe should be at the top of the pipe, and an isolating valve (Gate valve or a flanged- type butterfly valve) assembled on the outlet riser. Riser diameter should not be smaller than the valve nominal diameter.
- It is highly- recommended (although not compulsory) to locate the air valve itself beside the main, as described in the drawing below.
- In case of underground configuration, it is essential to allow air outlet as drawn below. The diameter of this outlet must be equal or larger than the valve diameter. A net strainer is recommended to be assembled on this outlet.

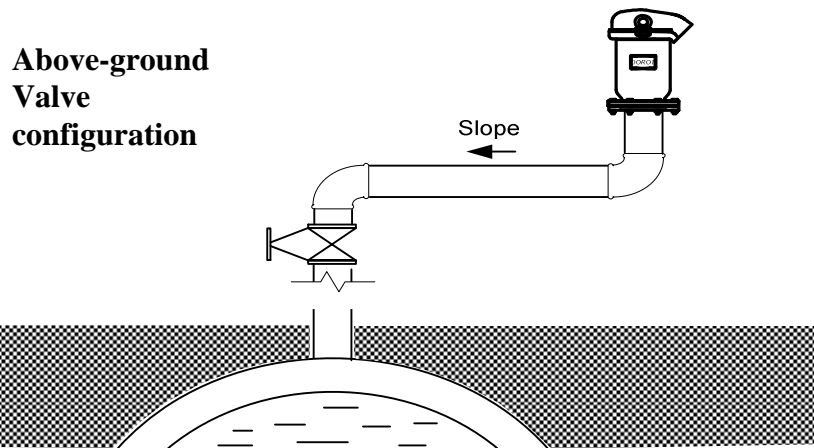

Underground Valve configuration

